



## Single Curtain Rod


### PART LIST:

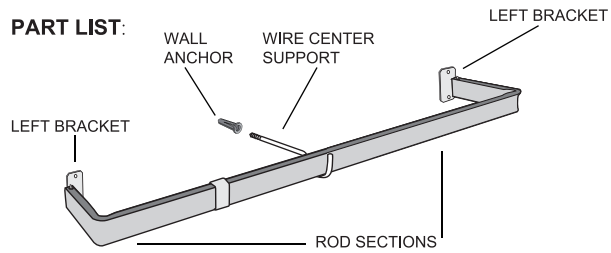

- ① Mark locations where wall bracket and center support holes will be. Drill 1/8" hole at each of these locations. Insert wall anchor in each hole.
- ② Attach brackets to wall or window frame. Attach all center support(s) evenly spaced between brackets.

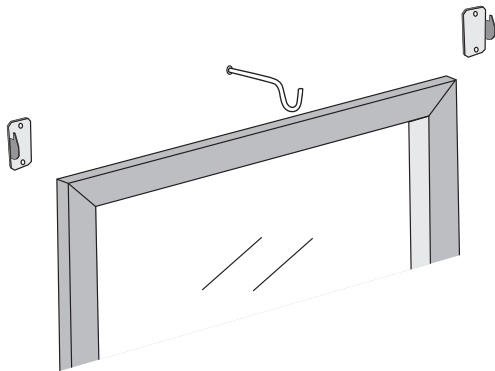


- ③ Slide rod sections together. Hook onto right and left brackets and swing down. Rod should rest on center support(s).

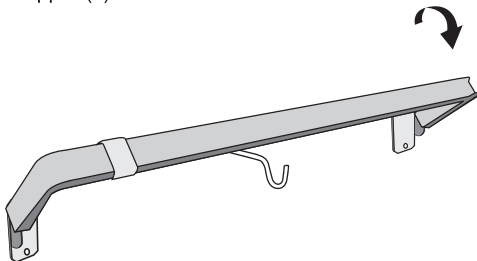


## Double Curtain Rod


### PART LIST:

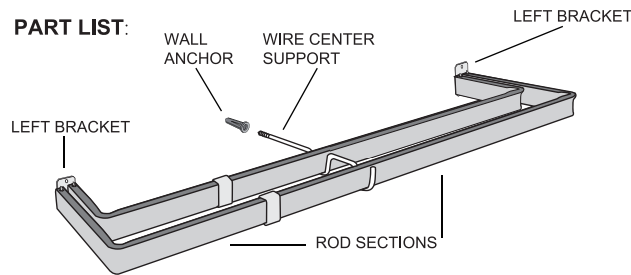

- ① Mark locations where wall bracket and center support holes will be. Drill 1/8" hole at each of these locations. Insert wall anchor in each hole.
- ② Attach brackets to wall or window frame. Attach all center support(s) evenly spaced between brackets.

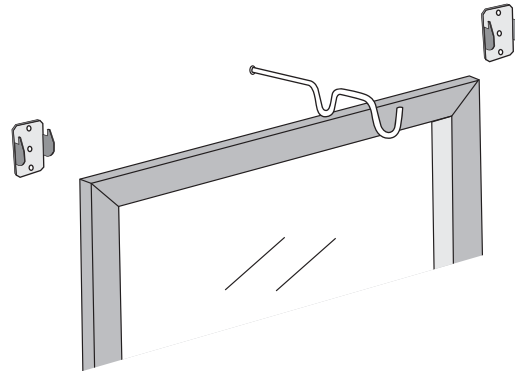


- ③ Slide rod sections together. Hook onto right and left brackets and swing down. Rod should rest on center support(s).

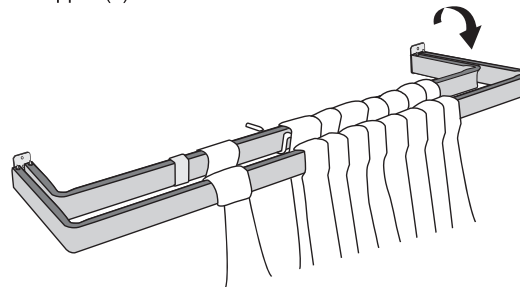


## Triple Curtain Rods


### PART LIST:

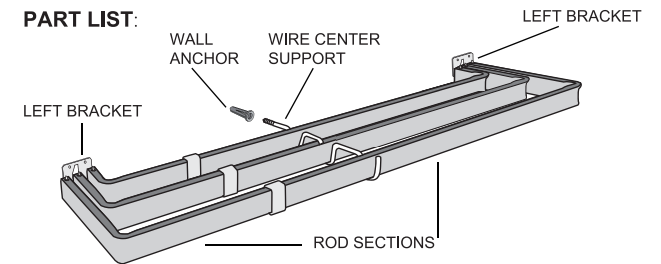

- ① Mark locations where wall bracket and center support holes will be. Drill 1/8" hole at each of these locations. Insert wall anchor in each hole.
- ② Attach brackets to wall or window frame. Attach all center support(s) evenly spaced between brackets.

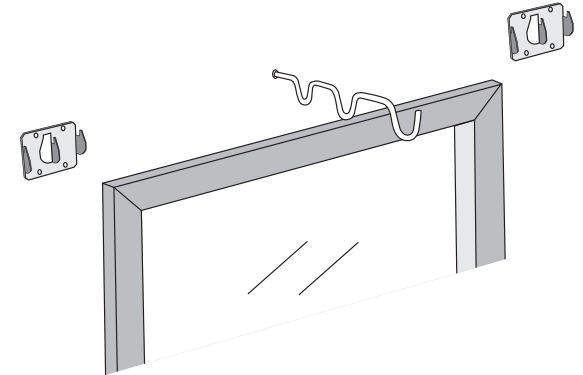

- ③ Slide rod sections together. Hook onto right and left brackets and swing down. Rod should rest on center support(s).

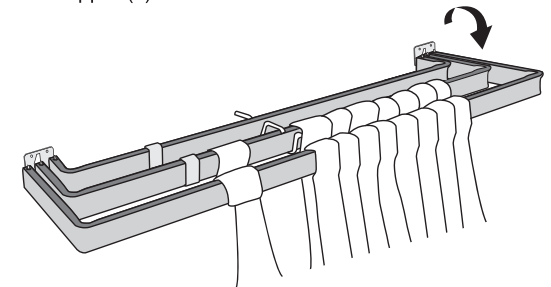

### NOTE :

If needed, use extender and extra support(s).